


RAPID ADJUSTMENT OF THE DATE AND 24 HOURS HAND







Important: please do not make any rapid adjustment of the date or the 24 hours hand between 8 p.m. and 2 a.m. as this may damage the mechanism.

1. Unscrew the crown and pull it out to position (II).
2. Turn the crown clockwise until the desired date is displayed.
3. Turn the crown anticlockwise to set the 24 hours hand.
4. Push the crown back and screw it in to position (0).

CHRONOGRAPH

Note: Before starting a timing, check that the crown is pushed back and screwed in to position (0) and return the hands of the counters to zero by pressing button  while the chronograph is stopped.

Simple or added timing

1. Press button  to start the chronograph.
2. Press button  again to stop the chronograph. The elapsed time or the first partial time is indicated by the hands of the counters ,  and .
3. Repeat these two steps for each additional timing. At the end of the last timing, the chronograph will indicate the total time, in other words the cumulative time of all the partial timings added together.
4. Push button  to return the counters to zero.

TACHYMETER*

Scale allowing measurement of average speed, for instance of a vehicle over a distance of 1 kilometer or 1 mile.

Example: Start the chronograph at the beginning of a 1 kilometer or 1 mile distance and stop it when this distance has been covered. If the distance took 20 seconds to travel, the average speed is 180 km/h or 180 mph.

Note: Measurement is limited to 60 seconds.

*According to model

RAYMOND WEIL S.A.

Avenue Eugène-Lance 36-38
P.O. Box 1569
1211 Geneva 26
Switzerland
Tel +41 (0) 22 884 00 55
Fax +41 (0) 22 884 00 50



GENERAL INFORMATION

info@raymond-weil.ch

AFTER SALES SERVICE

customer-service@raymond-weil.ch

WEBSITE

raymond-weil.com

RAYMOND WEIL

GENEVE

INSTRUCTIONS FOR USE

Caliber 7754

SELF-WINDING CHRONOGRAPH WATCHES

ZGU 714-7754

SELF-WINDING CHRONOGRAPH WATCHES



INTRODUCTION

Congratulations on your choice of a watch from the prestigious RAYMOND WEIL collection, a dynamic expression of masterful design and the constant objective of supreme quality that have been the hallmarks of the brand since its creation.

Your RAYMOND WEIL watch was hand-assembled by our master watchmakers according to the most rigorous quality standards of the Swiss watch industry.

In order to guarantee that your RAYMOND WEIL watch will function perfectly for many years to come, please pay close attention to the advice contained in these instructions for use as well as in the international guarantee.


Your watch has a self-winding mechanical movement with an exclusive complication module, and it has a running reserve of 46 hours.

Note: if your watch has stopped, before any adjustment it is necessary to wind it manually. Unscrew the crown to place in position (I), then turn it clockwise 20-30 times. When the winding is completed, screw the crown back in to position (0). When you wear the watch, it will wind automatically with the natural movements of your wrist.




DESCRIPTION

- | | |
|---------------------------|--------------------------|
| ① Hours hand | Ⓐ Crown |
| ② Minutes hand | Ⓑ "Start/Stop" button |
| ③ Seconds hand | Ⓒ "Reset to zero" button |
| ④ 24 hours hand | |
| ⑤ 60-seconds-counter hand | |
| ⑥ 30-minutes-counter hand | |
| ⑦ 12-hours-counter hand | |
| ⑧ Tachymeter scale* | *According to model |
| ⑨ Date | |

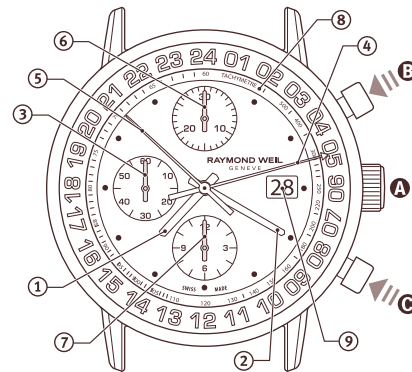

Crown positions

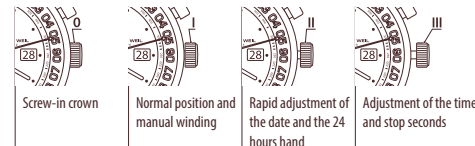

Important: In order to keep your watch water-resistant, and after any adjustment, always push the crown back and screw it in to position (0).

ADJUSTMENT OF THE TIME

1. Unscrew the crown and pull it out to position (III). The second hand will stop*.
2. Adjust the time by turning the crown in the desired direction.
3. Push the crown back and screw it in to position (0). The second hand will start moving again. This allows perfect synchronization with a reference time such as a radio-controlled clock.

* To adjust the time to the exact second, pull the crown out when the seconds hand ③ is on 60.